




• Finish direction parallel with drink rail length

INSTALLATION

- 1. Cut drink rail Item #DR-HEM sections to length (if necessary).
- 2. Apply adhesive to the bar top or counter substrate.
- 3. Adhere the first section of the drink rail section to the surface.
- 4. Insert joint connector Item #DR-HEM-JC into the end of the secured section of the drink rail to connect additional sections or inside corner piece Item #DR-HEM-IC.
- 5. Seal the top of any seams with a mildew resistant clear silicone sealer.
- 6. Apply adhesive and add End Cap Item #DR-HEM-RC or DR-HEM-LC as needed.

CUSTOM FINISHING AVAILABLE BY REQUEST

ISOMETRIC VIEW

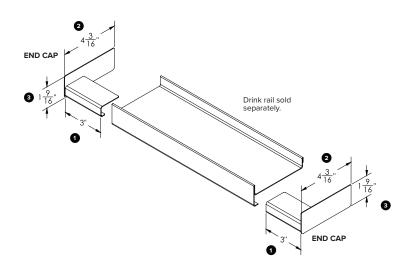

DIMENSIONS

LIP WIDTH	3"
9 SIDE PANEL LENGTH	4 ³ ⁄16"
3 SIDE PANEL HEIGHT	1 %16"